

# Replacing Pins

To replace the Pins on your Mocad please follow the instructions attached and if you have any queries please do not hesitate to contact our service departments, contact details are in your Owners Manual

## Tools required to replace the PINS

Hammer

## Refitting a PIN into the shaft

- If the old pin has broken and is still inside the shaft, you do not have to remove it. By inserting the new pin, it will push out the old one.

- When inserting a pin in to the shaft, please be careful to put the correct side of the pin into the shaft.

The pin has two ends.

- One end of the pin is flat

The other end of the pin is serrated

- Take the end of the Pin with the serrated edge and place it into the shaft.

- Take your hammer and push the Pin into the shaft until the pin comes out the other side. Ensure that the pin at either side of the shaft is the same length