

Replacing Shaft

To replace the Shaft on your Mocad, please follow the instructions attached. If you have any queries please do not hesitate to contact our service departments, contact details are in your Owners Manual

Step 1 Remove Old Shaft

- Remove both wheels from your trolley
- Remove both clutches from your trolley
- Remove both pins from the shaft of your trolley
- Remove 7mm nut on the shaft which is attached to the Gear box
- Remove shaft from the trolley

Step 2 Insert New Shaft

- Slide in the new shaft
- Please ensure that the shaft is lined up correctly with the middle hole in the shaft lining up with 7m nut in the gear box
- Reattach the 7m nut to the gear box
- Re-insert both pins into the shaft. Please ensure that you put the serrated edge of the pin into the shaft
- Reattach both clutches. Noting the left and right clutch. The left clutch is always on the side **nearest the gearbox.**
- Reattach wheels