

Replacing Switch

To replace the Switch on your Mocad please follow the instructions attached. If you have any queries please do not hesitate to contact our service departments, contact details are in your Owners Manual

Tools required to replace the Switch

Small Flat Head Screw Driver

Philips Head Screw Driver

1.5m Allen Key

Step 1 Remove Score Card Holder

- Open Flap of the score card holder
- Take Philips head screw driver and remove the 2 screws in the score card holder.
- Remove Score Card Holder

Step 2 Remove Handle

- Take the Philips head screw driver and remove the 5 screws in the handle
- Open the handle

Step 3 Remove Old Switch

- Take your flat head screw driver and unscrew and the wires from the switch to the green plug and remove switch
- With the 1.5m Allen Key loosen the grub screw on the black knob. Remove the black knob

Step 4 Fit New Switch

- Take new switch and refit wiring. Insert red to red on the green plug. The same with the black wire.
- If you have the old type switch in your trolley, the yellow wire is redundant with the new switch
- Place the switch into the handle taking note that the switch must be flush with the with handle and that the red & Black wires are pointing down the handle
- Re-attach handle by re-inserting the 5 screws
- Re-attach the score card holder by re-inserting 2 screws
- Re-attach the black knob with 1.5mm Allen Key